

Discrimination method of the holder star wheel



Follow the steps below to confirm whether or not a "star wheel" is existence at the downstream side of the holder star wheel.

[Confirmation steps]

- 1 To prevent ink leakage, do the following:
 - Close the ink tank caps.
 - Close the ink tube valve.
- 2 Detach the cassette1 and the cassette2.
- 3 Stand the printer with the tank side down and pull out the stacker.
- 4 Visually confirm the back side of the holder star wheel from the direction of arrow, on the bottom of the printer.



[Action based on confirmation result]

Confirmation result	Action
Exist the star wheel displayed at the position of the red marks. 	Select "Exist the star wheel of downstream side" by radio button then crick the [Input] button.
Not exist the star wheel displayed at the position of the red marks. 	Select "Not exist the star wheel of downstream side" by radio button then crick the [Input] button.

[Appendix]

Difference of holder star wheel seen from the bottom surface.

